


3rd Truss Instructions

for Ford and '96 and newer GM vans

If you have a 3rd truss for your Van Utility Rig, and own a Ford or '96 or newer GM, use this supplement along with your Van Assembly and Installation Instructions.

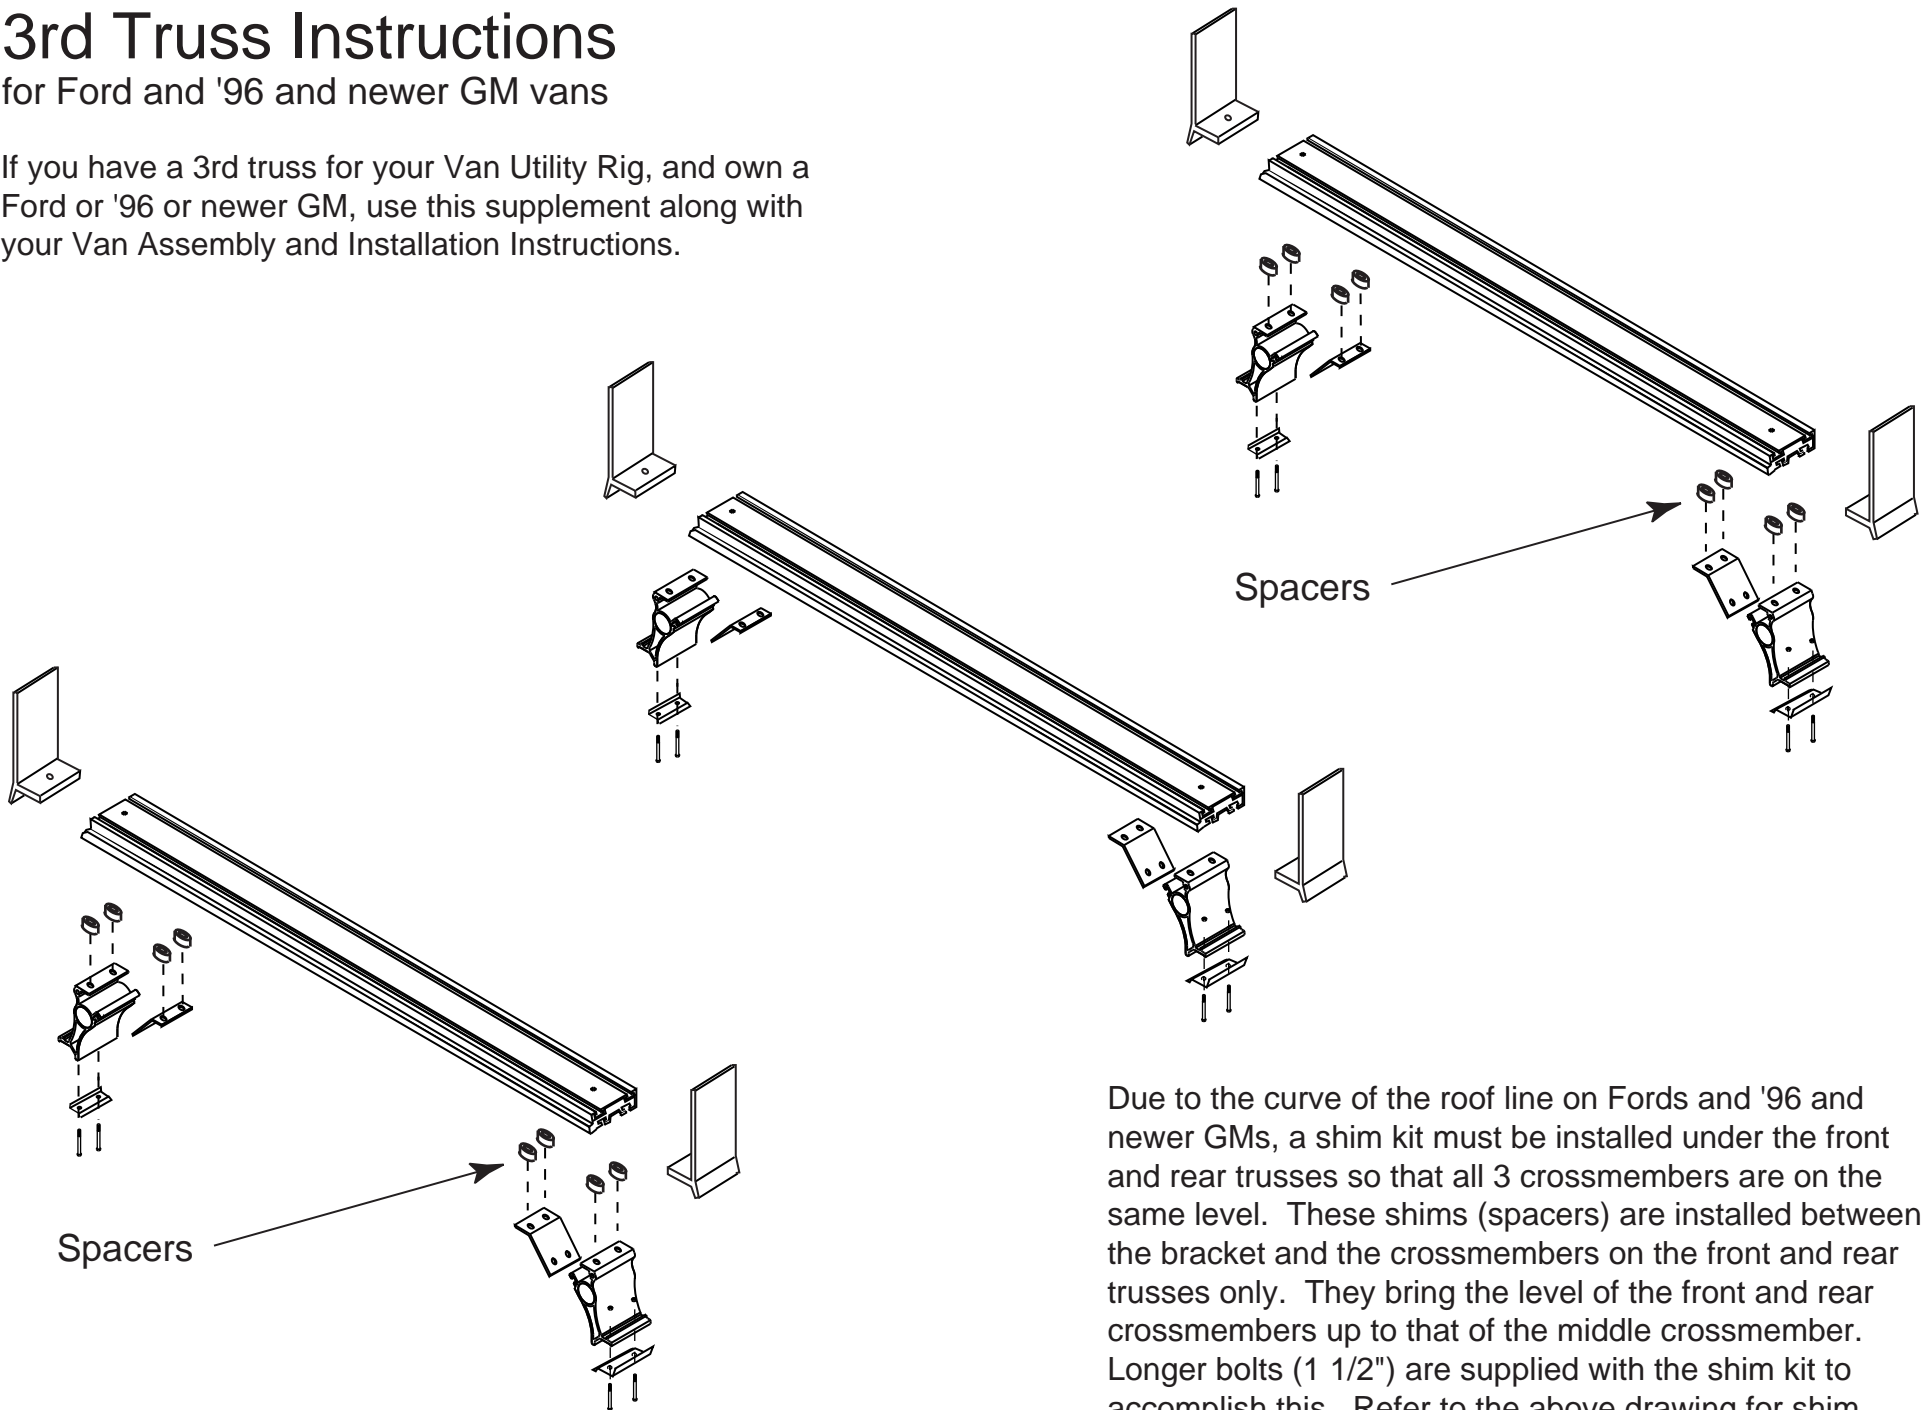

Due to the curve of the roof line on Fords and '96 and newer GMs, a shim kit must be installed under the front and rear trusses so that all 3 crossmembers are on the same level. These shims (spacers) are installed between the bracket and the crossmembers on the front and rear trusses only. They bring the level of the front and rear crossmembers up to that of the middle crossmember. Longer bolts (1 1/2") are supplied with the shim kit to accomplish this. Refer to the above drawing for shim location.